

INTEX® OWNER'S MANUAL

Built-in Fast-Fill™ Electric Pump

Model AP620A 220 – 240 V~ 50 Hz 90 W

IMPORTANT SAFETY INSTRUCTIONS

READ AND FOLLOW ALL INSTRUCTIONS BEFORE USING THIS PRODUCT

⚠ WARNING

- **NEVER PLACE AN INFANT TO SLEEP ON AIR MATTRESSES.**
- Never introduce any flammable substance into the inflatable airbed, SUCH AS AEROSOL TIRE REPAIR PRODUCTS, as it may ignite or explode.
- This is not a toy. Children must not be left unattended when using the airbed.
- Keep the storage bag away from babies and children. The storage bag is not a toy. When not in use, fold the bag and put it away out of the reach of children.
- Do not walk, stand on or jump on or use the airbed as a trampoline.
- Do not use on or near water. This is not a raft.
- Do not set up bed near stairs, doors, sharp edges or breakable objects. Provide adequate space between bed and objects to avoid entrapment.
- Make sure the area is flat, smooth, even and free of sharp objects that could puncture the bed.
- Keep pets away from the airbed. Pets may puncture the surface of the bed.
- Avoid sleeping on the edge of the airbed. Edges produce less support than the middle of the bed.
- Do not operate air pump for more than 5 minutes at a time. Let pump cool at least 15 minutes between use.
- Unplug electrical power cord when not in use.
- Do not obstruct the air passage opening or insert any objects into the air passage opening.
- If the AC supply cord is damaged, it must be replaced by the manufacturer or its service agent or similarly qualified persons in order to avoid a hazard.
- To reduce the risk of electric shock, do not expose to rain. Store indoors.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

FOLLOW THESE RULES AND ALL INSTRUCTIONS TO AVOID SUFFOCATION, PROPERTY DAMAGE, ELECTRIC SHOCK, BURNS OR OTHER INJURY.

INSTRUCTIONS

General


- No air pump maintenance is required.
- The appliance must be positioned so that the plug is accessible.
- For cleaning use only mild soapy solution. Do not use any chemicals.
- In case of repairs, use only common PVC repair glue and patches.

SAVE THESE INSTRUCTIONS

CAUTION

In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

PARTS REFERENCE

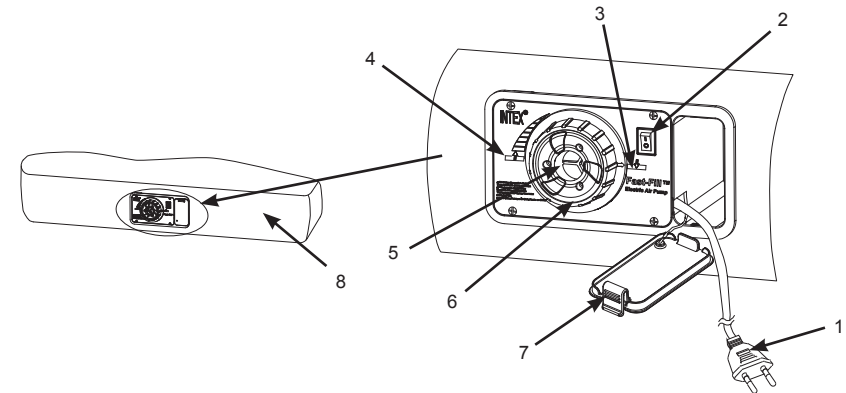

Part Descriptions:

- | | | |
|-----------------------|-------------------------------------|---------------------------|
| 1. AC line cord | 4. Deflation mark (⏏) | 6. Control dial |
| 2. Switch | 5. Air passage & control dial valve | 7. Cord compartment cover |
| 3. Inflation mark (⏏) | | 8. Airbed |

NOTE: Drawings for illustration purpose only. May not reflect actual product. Not to scale. Due to a policy of continuous product improvement, Intex reserves the right to change specifications and appearance, which may result in updates to the instruction manual, without notice.

INFLATION

1. Open line cord compartment cover. See Fig (1).
2. Plug in the AC line cord into an AC electrical outlet. See Fig (2).

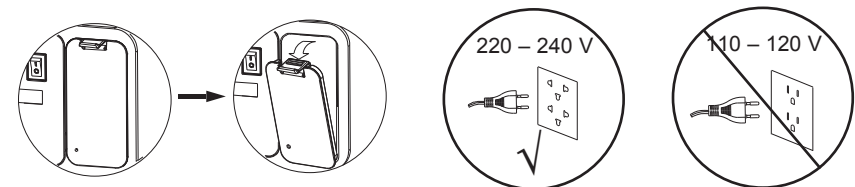


FIG (1)

FIG (2)

3. Open the foam vacuum valves on the corner of the sleeping surface of bed. See Fig (3).
4. Press "I" to switch ON. See Fig (4).
5. When the airbed is fully inflated to the desired firmness, press "O" to switch OFF. See Fig (5).

SAVE THESE INSTRUCTIONS

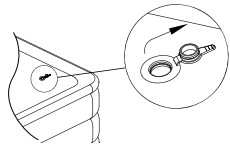


FIG (3)

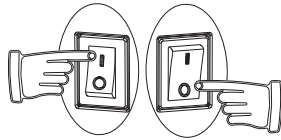


FIG (4)

FIG (5)

- Pat on the bed surface to adjust the foam.
- Note:** Leave the vacuum valves open to allow the foam to re-shape itself, this may take up to five minutes before initial use.
- Close the foam vacuum valves. See Fig (6).
- Lie down on the airbed to test the firmness.
- If the sleeping surface is too hard, adjust the firmness by turning the control dial counterclockwise gradually until air starts to exit through the air passage. See Fig (7). Turn the control dial fully clockwise when the desired firmness is achieved. See Fig (8). If the airbed becomes too soft repeat step #3 thru #7 as necessary.
- Disconnect the AC line cord from the wall socket, place it inside the cord compartment and close the cover.

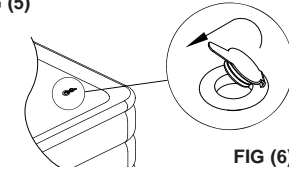


FIG (6)

 


FIG (7)

FIG (8)

IMPORTANT NOTE

Proper inflation of the airbed.

The ambient temperatures of air have an effect on the airbed internal pressure. At low ambient temperature the air will contract within the airbed and the airbed will feel softer: add air as necessary. At high ambient temperature the air within the airbed will expand significantly and the airbed will become hard and may burst: release air to avoid damage to the airbed or to soften the feel. **Do not** expose the airbed to extreme temperatures (hot or cold).

Air inside of bed may expand and contract with varying temperature leading to reduce pressure inside of the bed. If this occurs, simply add more air using the pump to achieve desired firmness. If puncture occurs, please refer to instruction. Repair kit/patch is enclosed. Stretching is a natural characteristic of new vinyl. During initial use, the airbed may become soft and require additional inflation to maintain desired firmness. This is normal for the first few days of use. Dimensions shown are approximate and will vary due to the vinyl temperature and the air temperature.

In no event shall Intex, their authorized agents or employees be liable for damages (such as pin holes) to the airbed caused by negligence, ordinary wear and tear, abuse and carelessness, or external forces.

DEFLATION

- Open line cord compartment cover. See Fig (1).
- Plug in the AC line cord into an AC electrical outlet. See Fig (2).
- Turn the control dial counterclockwise until arrow points to deflation mark (↰). See Fig (9).

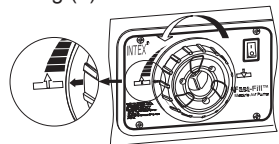


FIG (9)



FIG (10)

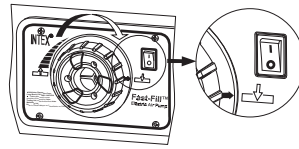


FIG (11)

SAVE THESE INSTRUCTIONS

- Press "1" to switch ON. See Fig (4).
- When the airbed is completely deflated, begin rolling the airbed from the foot of the airbed towards the head of the airbed where the pump is located. See Fig (10).
- When all air is removed from the airbed, press "0" to switch OFF. See Fig (5).
- Turn the control dial fully clockwise. See Fig (11).
- Disconnect the AC line cord from the wall socket, place it inside the cord compartment and close the cover.

INFLATION OPTION

- If electrical power is not available then a conventional foot or manually operated air pump can be connected to the control dial valve for inflation. See Fig (12).
- Turn the control dial clockwise until arrow points to the inflation mark (↴).
- Insert air pump nozzle to the control dial valve to inflate the airbed.

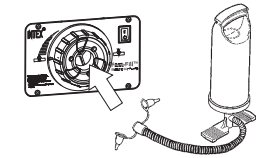


FIG (12)

IMPORTANT

Inflate only with a low pressure inflator. Do not over inflate. Fill with cold air only.

STORAGE

- Deflate the airbed following the "DEFLATION" instructions.
- Turn the control dial counterclockwise until arrow points to deflation mark (↰). See Fig (9).
- Make sure the airbed is clean and dry.
- Lay bed flat with sleeping surface facing upwards and follow the folding steps on Figs (13 - 17). Fold the airbed loosely and avoid sharp bends, corners and creases which can damage the airbed.



FIG (13)



FIG (14)

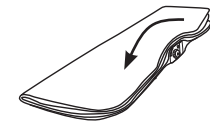


FIG (15)

 


FIG (16)



FIG (17)

- Turn the control dial fully clockwise. See Fig (11).
- Place the airbed inside the storage bag and store in a dry, cool storage location.



©2017 Intex Marketing Ltd. - Intex Development Co. Ltd. - Intex Trading Ltd. - Intex Recreation Corp. All rights reserved/Tous droits réservés/Todos los derechos reservados/Alle Rechte vorbehalten. Printed in China/Imprimé en Chine/Impreso en China/Gedruckt in China. ®™ Trademarks used in some countries of the world under license from®™ Marques utilisées dans certains pays sous licence de/Marcas registradas utilizadas en algunos países del mundo bajo licencia de/Warenzeichen verwendet in einigen Ländern der Welt in Lizenz von/Intex Marketing Ltd. to/a/a/an Intex Trading Ltd., Intex Development Co. Ltd., G.P.O. Box 28829, Hong Kong & Intex Recreation Corp., P.O. Box 1440, Long Beach, CA 90801 • Distributed in the European Union by/Distribué dans l'Union Européenne par/Distribuido en la Unión Europea por/ Vertrieb in der Europäischen Union durch/Intex Trading B.V., Venneveld 9, 4705 RR Roosendaal - The Netherlands www.intexcorp.com

SAVE THESE INSTRUCTIONS