

INTEX® OWNER'S MANUAL

Portable Travel Baby Bathtub

IMPORTANT SAFETY RULES

280

Read and follow all safety information and instructions. Keep for future reference. Failure to follow these warnings and instructions can result in serious injury or death.

Packaging must be read carefully and kept for future reference. See product for additional warnings.



WARNING

DROWNING HAZARD

- Infants have **DROWNED** in infant bathtubs.
- **NEVER** leave the infant unattended.
- Prevent drowning. **ALWAYS** keep infant within adult's reach.
- **NEVER** lift this product with infant in it.
- **NEVER** place this product in water in an adult bathtub.
- **ALWAYS** keep the drain open in the adult bathtub.
- Infant can drown in as little as 2.5 cm (1") of water.
- **ALWAYS** bathe your infant using as little water as necessary.
- **NEVER** allow other children to substitute for adult supervision.
- **ALWAYS** test water temperature before placing the infant into the product.
- Bathing water temperature shall be between 32 – 38°C (90 – 100°F).
- Discontinue the use of product if it is damaged, broken or disassembled.
- **NEVER** put an infant to sleep on this product.
- **NEVER** inflate or deflate with an infant inside the product.
- This is not a toy. Store out of infant's reach.


INSTRUCTIONS

General

- Assembly and disassembly by adults only.
- For use with children birth to 12 months.
- Ensure this product is compatible with an adult bathtub before use.
- Do not place this product onto another support other than an adult bathtub.
- Recommended bathing time: 10 minutes.
- There are no serviceable parts.

How to inflate and use

1. Inflate each air chamber with the included hand pump until it is firm to the touch but not hard. Never over-inflate or use high pressure air to inflate.
2. Insert the stopper into the valve and recess the valve by pushing down firmly on it.
3. Place the product into an adult bathtub that it is level, stable and firm.
4. Ensure the drain valve cap is securely closed by pushing down firmly on it, and fill with as little water as necessary.

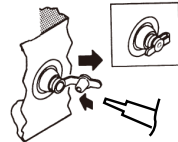

- CAUTION:** Never pour hot water directly into this product.
5. Make sure you have all bathing needs within arm's reach before placing the infant in this product.
 6. Place the infant's back on the reclined section with the legs between the protruding crotch support.

How to deflate, empty and clean

1. With the infant safely out of the product, pull drain valve cap out.
2. Clean and rinse with mild soap and warm water. Air dry thoroughly before storage.
3. Pull stopper out and squeeze the valve at its base until deflated. Replace stopper back.

Maintenance and storage

1. Check seams and material regularly for tears and holes. If there are any defects discard the product and replace by a new one.
2. Ensure the product is completely dry before storing. The original packing can be used for storage. Store the product in a dry room above 5°C (41°F).

Model #: 48421

280-***-R1-1610

SAVE THESE INSTRUCTIONS